


PRESENTA NUSTYLE ASSEMBLY INSTRUCTIONS

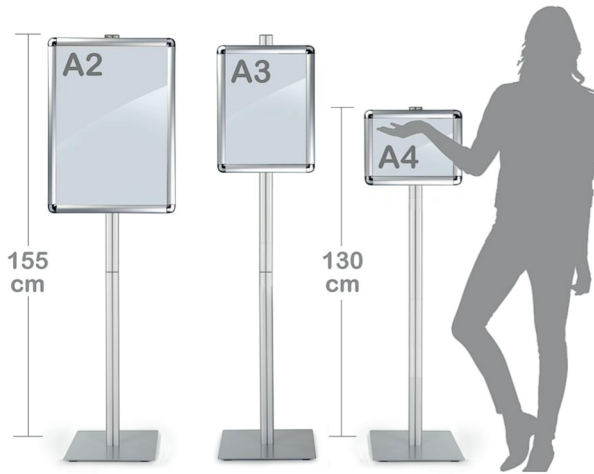

A2 and A3 models are supplied with a two-piece leg. A4 models have a one-piece leg: steps 2 to 4 are not required for A4 models.




1 Identify the leg with two threaded screw ports inside. Using the two socket head bolts and the larger allen key connect the square base to the bottom leg and tighten up.



2 Insert the two connector rods with half the rod inside the bottom leg and the other half protruding.



3 Small grub screws are pre-loaded in the leg. Use the small allen key to secure each connector rod.

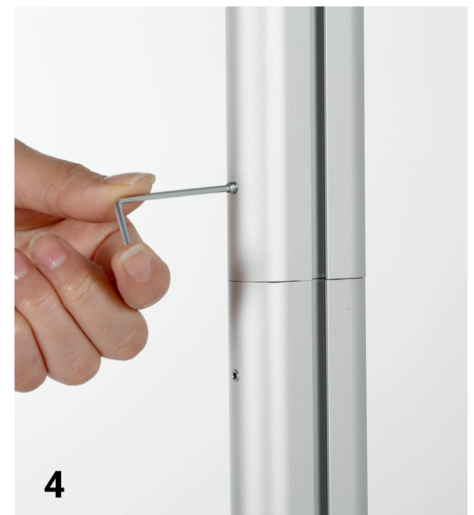

4 Engage the upper part of the leg with connector rods. Tighten the pre-loaded grub screws to secure the two sections.



5 Remove the grey plastic top cap by pushing up - be careful not to mark the aluminium if using a tool to get it started.



6 Open the snap frame. Choose portrait or landscape. Loosely assemble two mounting screws with lugs on the back to align with the channel in the leg.



7 Set frame at the height required and tighten the screws. Repeat for a second frame (if ordered) - either on the same side or back-to-back.