


# FLOOR STAND FOR AUTOMATIC HAND SANITISER - ASSEMBLY INSTRUCTIONS



Using the two socket head bolts and the larger allen key connect the square base to the bottom leg and tighten up.

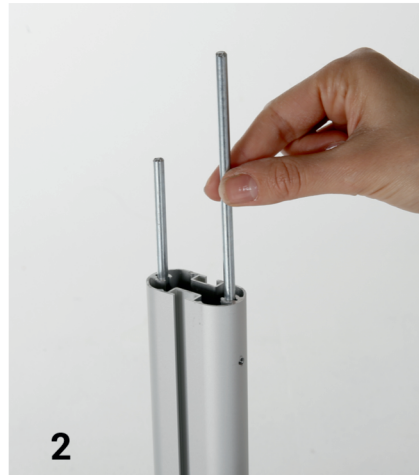

Insert the two connector rods with half the rod inside the bottom leg and the other half protruding.



Small grub screws are pre-loaded in the leg. Use the small allen key to secure each connector rod.



Engage the upper part of the leg with connector rods. Tighten the pre-loaded grub screws to secure the two sections.



Remove the grey plastic top cap by pushing up - be careful not to mark the leg if using a tool to push.



Engage two lugs on the mounting bracket into the leg channel. Screw tight at the desired height.



Open the automatic dispenser with the push-in key. Remove gel bottle. Align the fixing holes with the bracket and tighten the two small screws.



Open the snap frame. Choose portrait or landscape. Loosely assemble two mounting screws with lugs on the back to align with the channel in the leg.



Set frame at the height required and tighten the screws. Insert a print of your choice behind the clear cover sheet.