



## Floor standing office screen

### Short Description

- Floor standing office screen supplied as stable free-standing or mobile versions with wheels
- Full height clear PET panel 2m tall secured in a stylish silver aluminium frame
- Excellent floor screen as a room divider or for social distancing
- Our clear room divider screens are available with optional wheels. Linked screens are also available.

### Product Images



















## Description

---

### **Clear floor standing office divider screen**

Our floor standing screen is the perfect office divider screen. This 2m high freestanding office screen offers a smart and economical solution in any situation such as an office or restaurant where people who are physically close need to be separated and by a floor screen. Our clear office divider screens are supplied with wheels or with stable feet - making for light and easy to move self standing space dividers.

Our floor standing screens are available with short lead times. The clear glazing is 1mm thick clear PET as opposed to perspex which makes for very competitive pricing compared with office screens glazed with thicker acrylic or glass. A stylish freestanding aluminium frame with optional wheels (locking castors) holds the glazed panel to create a lightweight yet effective protection screen.

### **Smart silver frame with see-through glazed panel**

This free standing clear office screen is a stylish design originally conceived to act as a 2 metre high sneeze protection barrier as well as a room divider. Each floor screen is 100 cm wide and multiple screens can be lined up to create a continuous wall of protection. Linked office screens are also available (see links below).

Black framed screen are now only available to special order and subject to minimum quantities - please call. White screens with opaque white panels are available - see separate product (refer to links below)

### **Lightweight and movable office screen**


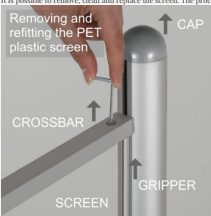
The clear panel is PET which provides outstanding clarity, secured into the pre-assembled aluminium frame with a gripper to prevent rattling. Each modular office screen has sturdy metal feet to keep it upright and stable, with a wheels option for those wanting a mobile divider screen. The PET panel is very light-weight so screens can easily be moved around - or choose the version with wheels for the ultimate ease of movement.

### **Perfect office screen in many situations**

Infection threat still lingers, and the benefits of social distancing are now well understood. Sometimes staff, visitors and customers feel more secure when a clear partition is provided. Our free standing screens and clear movable partitions with castors offer a very reasonably priced way to provide a safety barrier to offer reassurance and help prevent infection.



# Additional Information

<p>More information</p>	<p><b>Benefits of movable office partitions</b> Office partitions offer some protection against transmission of airborne germs or viruses at close quarters. Office dividers also slightly help reduce sound interference of neighbouring conversations.</p> <p><b>Wheels</b> When you order the wheeled version of the floor screen the set of 4 wheels (castors) are packed separately. The pads on the supplied feet need to be removed and replaced with the wheels. The wheel kit includes the two spanners and dome-headed nuts required to secure the castors.</p> <p><b>Delivery considerations</b> This product is not heavy to pick up or move but it is very large. We deliver using a specialist courier. The screen cannot be returned using a standard parcel delivery company or transported in a car. Please refer to the Delivery and Returns tab for more information.</p>
<p>Product Dimensions</p>	<p><b>Dimensions</b> We offer one size of screen: 2m high x 1m wide. Screens can be stood in a line, the ends butting up to one another, to create longer protective barriers. Alternatively linked screen sets are available (please refer to links below).</p> <p>The overall height of the screen (without castors) is 2006 mm and the overall width is 9000 mm. The thickness of the PET panel is 1 mm. It is supplied with protective film on each face. This must be peeled off during assembly otherwise the panels will appear opaque and dull. The feet are 400 mm long, centred under the screen so they protrude out either side of the screen by approx 20 cm. This provides sufficient stability for normal traffic areas indoors, away from automatic doors which can cause significant gusts of wind. The screens are not intended for use outdoors.</p> <p>The vertical uprights are 40 mm deep by 38 mm wide (i.e. viewed from the front). The feet are made from 6 mm thick steel (powder coated) and supplied with protective black plastic pads on the undersides. They are equipped with holes at all four corners to allow screwing down to the floor (optional - the customer must evaluate the appropriate fixings needed) or the fitting of castors to create the version with wheels.</p>
<p>Assembly and Installation</p>	<p><b>Easy assembly and refitting of clear plastic screen</b></p> <ul style="list-style-type: none"> <li>• Assembly instructions are supplied.</li> <li>• The frame is supplied ready assembled with just the feet and optional wheels to be added.</li> <li>• If the plastic screen needs to be refitted because it 'popped out' in transit or during vigorous cleaning, this can be done easily. See instructions below.</li> <li>• The legs are attached using supplied bolts and allen key (hexagonal wrench).</li> </ul>  <p>Optional castors can be fitted to the metal feet by means of supplied dome head nuts which need to be tightened with a pair of spanners (supplied in the optional wheels pack). It is possible to remove, clean and replace the screen. The process takes about 5 minutes for 2 people working together.</p>
<p>Delivery and Returns</p>	<p><b>Removal and replacement of the screen</b></p>  <ol style="list-style-type: none"> <li>1. Remove the top plastic caps. They should pull out but you may need to push them out using a flat blade screwdriver.</li> <li>2. Lay the floor screen down on the floor.</li> <li>3. Looking at the top crossbar you will see 2 hexagon shape nuts, with a 3mm Allen key, rotate these anti-clockwise to release the side locks.</li> <li>4. Slide the clear plastic screen out of the stand; now remove the plastic gripper strips from the slots in the stand.</li> <li>5. Attach the grippers to the screen and slide back into the stand. The technique is to push each side in at the same time.</li> <li>6. Replace the top crossbar and feed the top of the screen into the crossbar gripper strips.</li> <li>7. Gently push down on the crossbar and tighten the lock screws with the allen key. Before tightening the side locks ensure the T-shape end is properly engaged in the side poles.</li> <li>8. Replace the top caps.</li> </ol> <p>If you require a 3mm allen key we will post one to you. You will have received one in the original kit as it is the same size used to attach the feet to the upright poles.</p> <p><b>Special considerations for floor screens</b> Floor standing protective screens are boxed individually. The box is very large (but light to carry) as the unit is shipped pre-assembled (apart from the feet). We recommend getting them delivered to the final destination - they are too large to transport in a car. It is vital to retain the original packaging until the units have been assembled and checked.</p> <p>When buying in quantity we ship the boxes on a pallet or boxes fit on one pallet.</p> <p>You do not need pallet handling facilities. The driver will use a tail lift vehicle to get the pallet to the curbside. You can easily open the outer protective packaging and carry the individual boxes indoors.</p> <p>Price of charge (A minimal delivery applies to UK Zone 1)</p> <ul style="list-style-type: none"> <li>• We offer a choice of delivery options tailored to the goods selected and your location, calculated for you automatically in the Checkout. When feasible, you will be offered options for Free, Economy or Next Day delivery.</li> <li>• Any product returned by the purchaser must be unused and in its original packaging, which should be unmarked. If goods are received damaged or faulty we will take care of the problem.</li> <li>• For detailed information about Delivery charges or Returns and refund policies, please click on the links below.</li> </ul>
<p>Include in Google Feed</p>	<p>No</p>
<p>Postable</p>	<p>No</p>
<p>Small parcel</p>	<p>No</p>
<p>Oversize</p>	<p>No</p>

